



232 Branford Rd.
North Branford, CT 06471
Orders: 203.481.9460
Tech: 203.481.9943
Fax: 203.481.9641

Product Instructions

#80-500 FUEL CHILLER TANK

This tank's interior features a coiled fuel line that enters and exits the tank at the two 3/8" NPT ports on the tank's exterior. It is designed to lower fuel temperatures when the inside is filled with ice through the large cap and the fuel flows through the coil. Your fuel supply line can be plumbed to whichever 3/8" NPT port is most convenient as the coil flows in either direction.


1. Plumb fuel lines to the 3/8" NPT inlet and outlet ports (does not matter which one is in or out).
2. Use the mounting tabs on the tank to mount securely in place.
3. Fill tank with ice or ice packs, etc.
4. Prime fuel system and start the vehicle.

Installation is now complete.

NOTE: To drain; Remove the 1/4" NPT fitting from the bottom of the tank.

FUEL INLET OR OUTLET

FLUID DRAIN

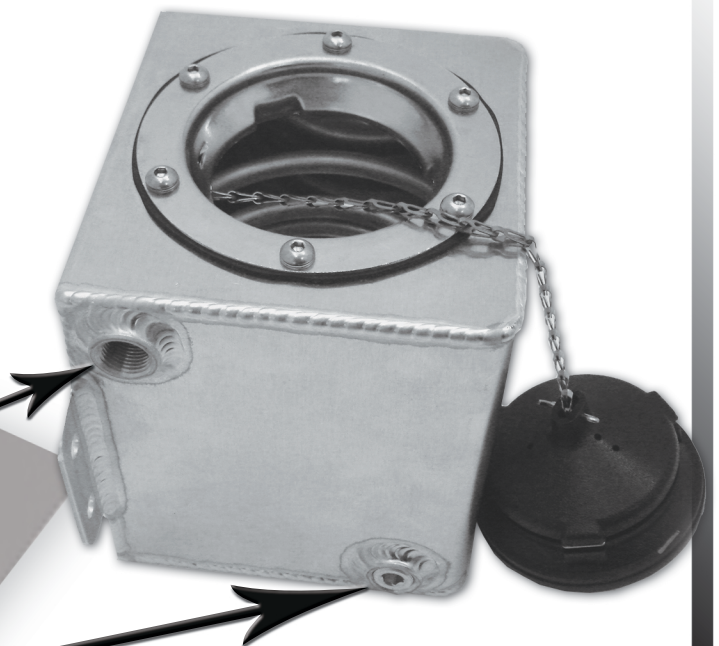

www.CantonRacingProducts.com